

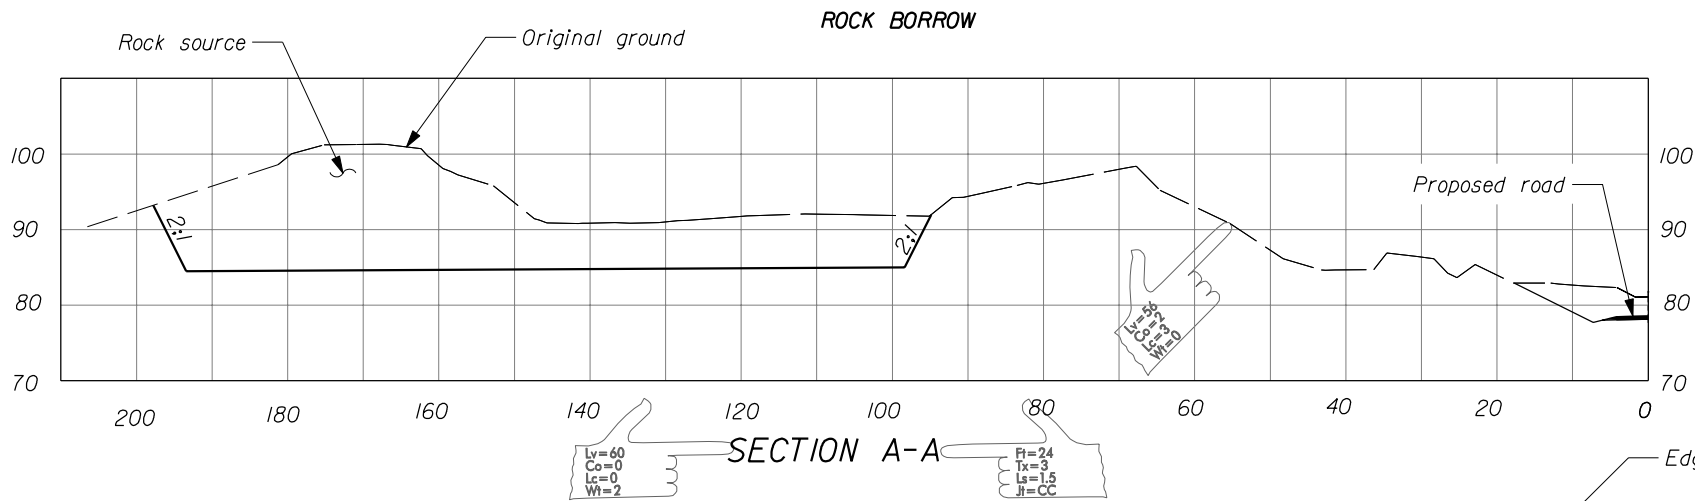


3/1999
D. Checker
2/1999
A. Designer
11/28/01
F:\StanDraw\SampleSheets\ak09gmc.dgn

STATE	PROJECT	SHEET NUMBER
AK	PFH 9-1(9)	G.1

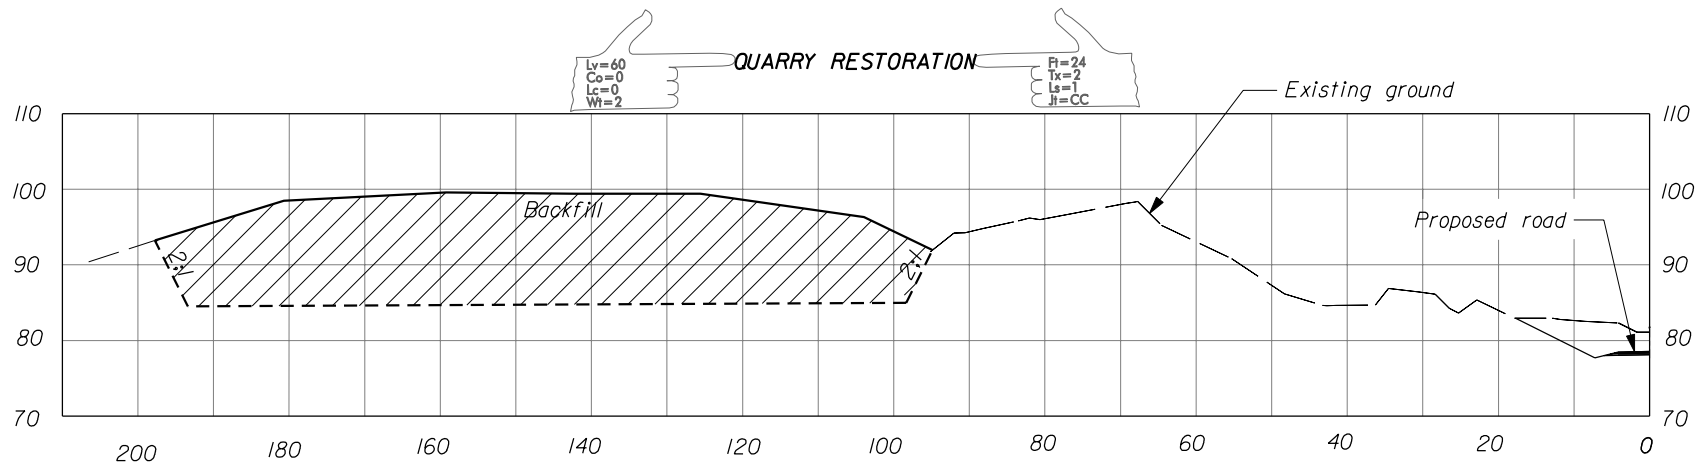

98950
SET 13mm IRON ROD
W/YPC STAMPED "FHWA CTRL"
N = 424362.627
E = 864619.864
Z = 106.291

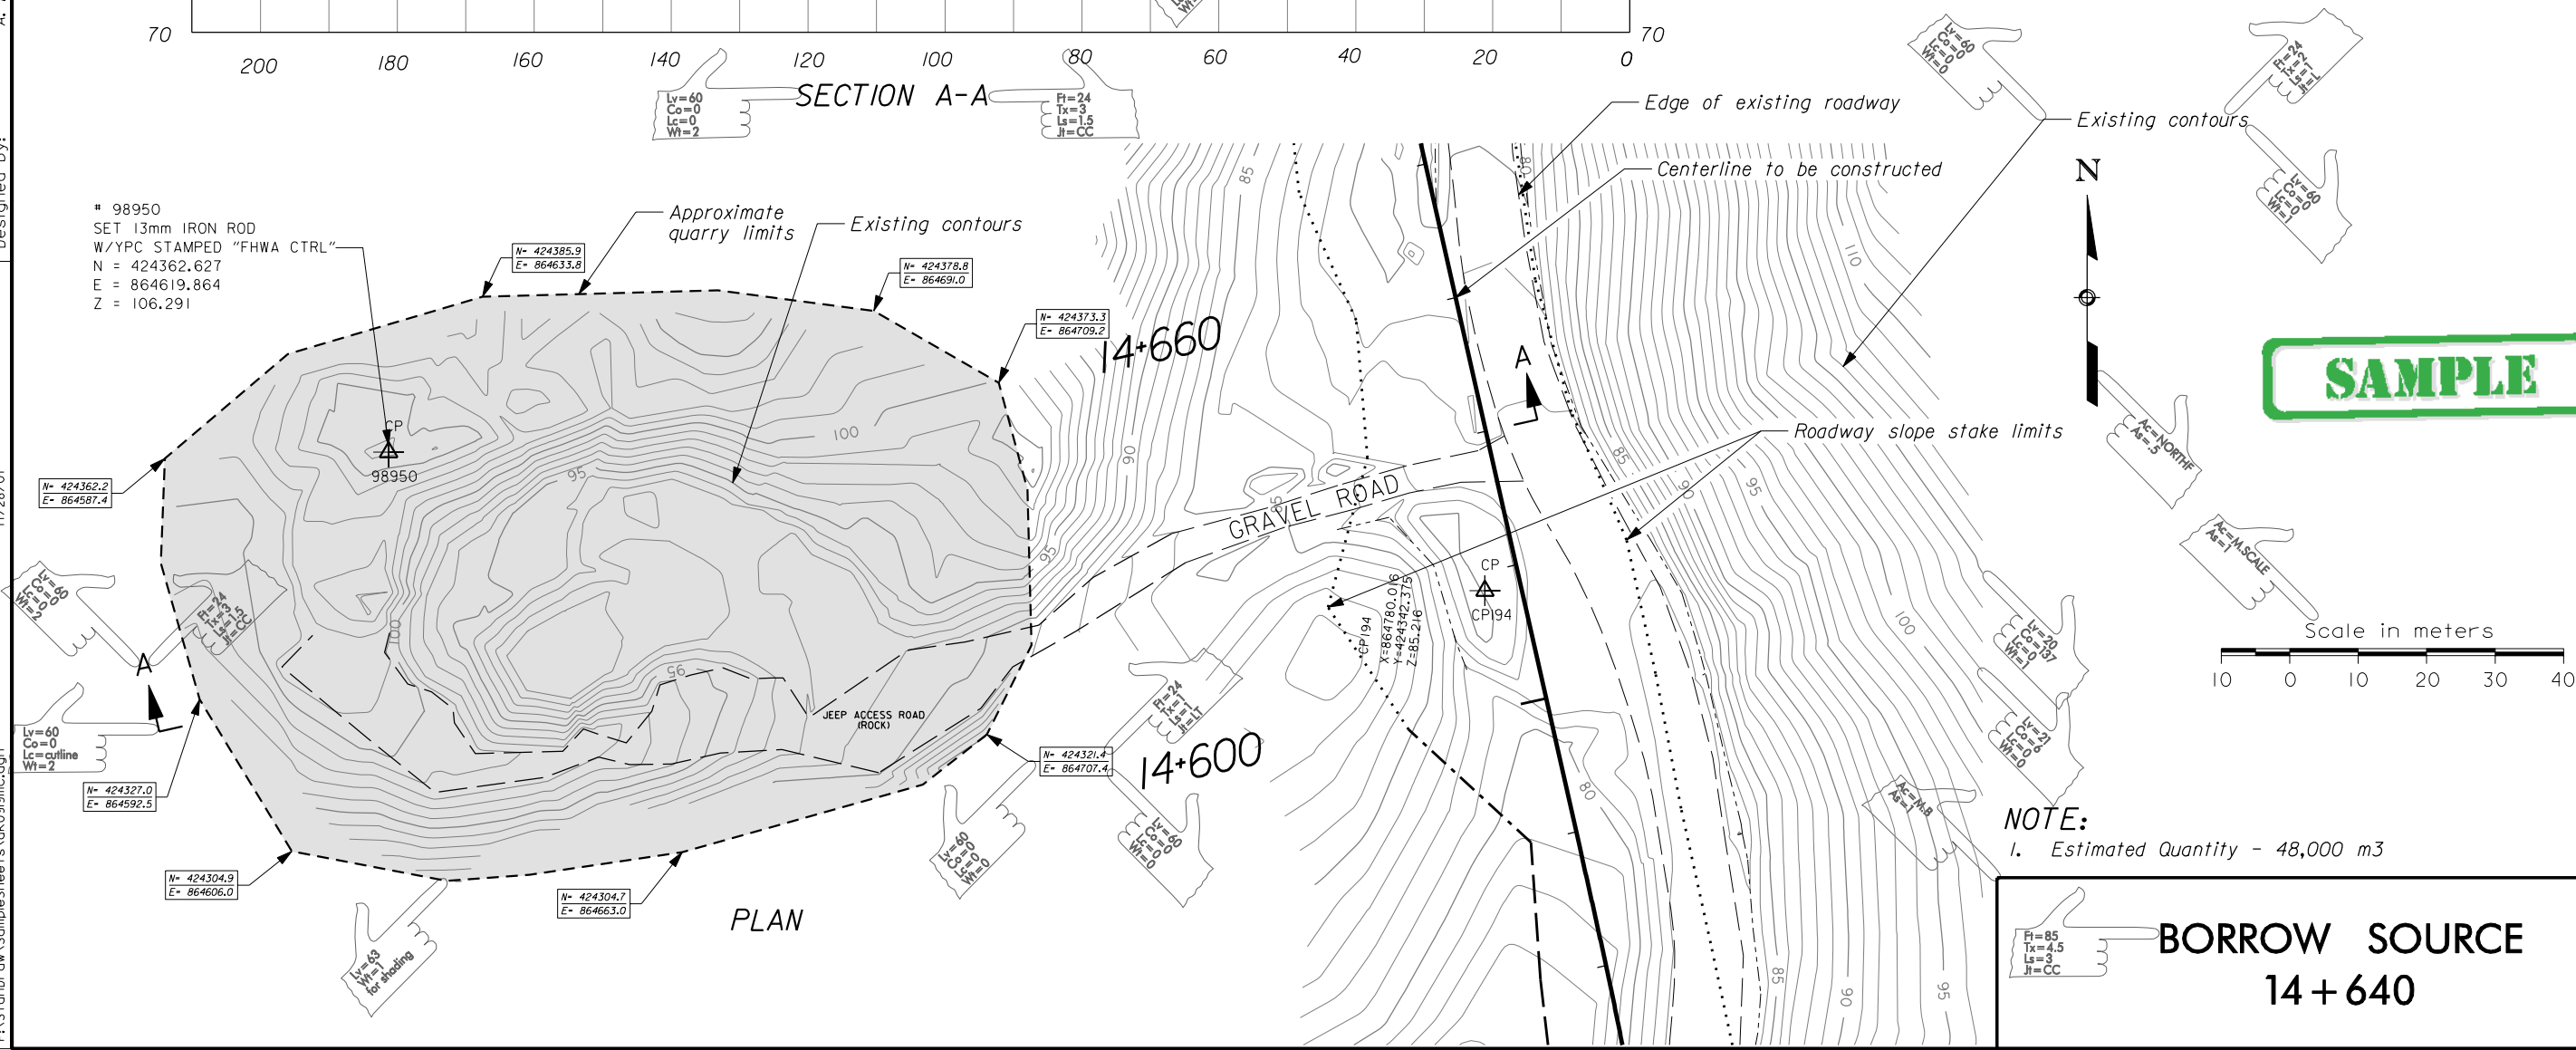

QUARRY DEVELOPMENT NOTES

1. Clear and grub according to Section 20I. Limit work to the areas needed for quarry, roadway development, stockpile sites. Do not begin operations until approved by the CO.
2. Conserve and stockpile overburden for quarry restoration.
3. Roadway cut and fill slopes are shown in the Slope Stake Notes.

QUARRY RESTORATION NOTES

1. Backfill rock borrow quarry site with unsuitable material from roadway excavation.
2. Place backfill material and slope to prevent any movement by material into adjacent areas.
3. Place conserved topsoil or fine grained soils on top 300 mm of backfill.

NOTE:
1. Estimated Quantity - 48,000 m3

BORROW SOURCE
14 + 640